

### INSTRUCTION

#### **OPENING THE DINING BOOSTER**

First press both buttons (G) fully inwards to release the tray (C) (1).

The tray (C) will slightly lift up automatically (2).

Open the legs fully and open the back support (I), then lift tray (C) until you hear a "click" (3).

Push the front corners of the seat down until you hear a "click" (4). (See Lock Symbol).

#### **SECURING YOUR DINING BOOSTER**

Place the dining booster centrally on a stable chair and does not extend over the edges of the chair (5).

To make the dining booster horizontal, rotate the anti-slip feet (F) on the base before attaching the leg securing straps (E) (6).

Fit the leg securing strap (E) on one side of the dining booster, pass under the chair and then reattach to the opposite side of the dining booster (7).

Tighten the strap on both sides of the dining booster to ensure a secure fit (8). Open the rear securing strap (J) and pass it around the backrest of the chair and connect the buckle, tighten the strap (9).

Open the harness buckles, place the child onto the dining booster, this is best done with the tray (C) removed (11). Then secure the harness and tighten the harness straps (A) fully.

#### REMOVING AND INSTALLING THE TRAY

Remove the tray (C) by pressing the two tray release levers (D) on the under-side of the tray (C) and lift upwards (10).

Reverse this procedure until you hear a "click" to install the tray (C) back to the dining booster (12).

#### **FOLDING THE DINING BOOSTER**

Press both buttons (G) fully and press the tray (C) downwards (13). Lift the seat up until it snaps out of position (14). Close the legs and back support (I) together then fold the tray (C) down, until you hear a "click" (15).

\* When you press the buttons (G), normally the tray (C) will come downwards slightly. But for new products that used for the first several times, maybe needs to slightly press the tray (C). This is not a quality issue.

#### **CLEANING**

Wipe with a damp cloth and air dry. Do not immerse in water.

SAFETY STANDARD EN 16120:2012+A2:2016 AND ASTMF2640:2012



# FLIPPA™ DINING BOOSTER


SUITABLE FROM 6 MONTHS - 3 YEARS OR 15KG



IMPORTANT! ADULT ASSEMBLY REQUIRED!
PLEASE READ THESE INSTRUCTIONS CAREFULLY
AND KEEP THEM FOR FUTURE REFERENCE!

## **COMPONENT LIST**

- **A HARNESS STRAP**
- **B** CROTCH STRAP
- C TRAY
- **D** TRAY RELEASE LEVER
- **E** LEG SECURING STRAP
- F ANTI-SLIP FEET (FRONT AND REAR)
- **G** OPEN AND FOLD RELEASE BUTTON
- **H** STRAP ADJUSTER
- I BACK SUPPORT
- J REAR SECURING STRAP

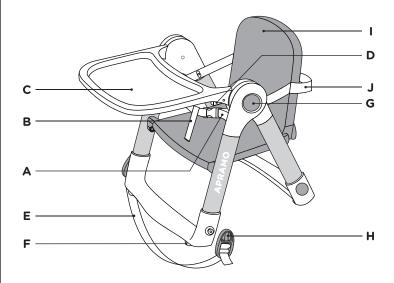

CARELESSNESS CAUSES FIRE. THE PRODUCT HAS BEEN TESTED ACCORDING TO THE **RELEVANT SAFETY STANDARDS.** 





# NWARNING!

**NEVER LEAVE YOUR CHILD UNATTENDED!** ALWAYS USE THE CHILD RESTRAINT AND CHAIR



ALWAYS CHECK THE SECURITY AND STABILITY OF THE **CHAIR BEFORE USE!** 

DO NOT USE IF ANY PART IS BROKEN OR MISSING!



- 1. Please read these instructions carefully and keep them for future reference. Failure to follow the instructions may affect your child's
- 2. Ensure your child cannot push against the table with their feet.
- 3. This product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg. This product is not suitable for children over 15kg in weight.
- 4. Do not use accessories or replacement parts other than those approved by the manufacturer.
- 5. Only attach to chairs with 4 legs.
- 6. Never attach to swivel chairs or chairs with wheels, stools, folding chairs, or any other surface that is not entirely stable.
- 7. Only attach to a chair with back rest which has a min height of 50cm and min width of 29cm and min seat size of 42cm wide and 40cm front to back.
- 8. Do not place on a table or any other raised surface. Never use it on a sofa or as a car

